



BASIC KNOWLEDGE IN MAINTAINING A SAFE VEHICLE

THE PROPER WAY IN SAFE HANDLING OF SGPC VEHICLES

PRE-USE CHECK AND GOOD HOUSE KEEPING!!!

CLEANLINESS IN AND OUT

ENSURES IN AND OUT CLEANLINESS OF THE VEHICLE SPECIALLY
WINDSHIELD, WINDOW GLASSES AND DASHBOARD



CLEANLINESS IN AND OUT

CLEAR AND CLEAN WINDSHIELD AND
SIDE MIRRORS



CLEAN DASH BOARD



**ENSURES CLEANLINESS OF ENGINE COMPARTMENT, FREE FROM OIL DROPS
AND EXCESSIVE DUST TO AVOID ANY RISK OF FIRE**



FREQUENT CHECKING OF BATTERY FITTINGS AND ENGINE OIL LEVEL



FOR YOUR OWN SAFETY, ALWAYS USE HAND GLOVES WHEN CHECKING THE ENGINE COMPARTMENT. DON'T OPEN RADIATOR COVER CAP WHILE HOT (ISUZU PICK UP'S). LET THE ENGINE COOL DOWN FIRST TO AVOID HOT STEAM PRESSURE FROM GUSHING OUT THAT CAN CAUSE SERIOUS INJURIES UPON OPENING OF RADIATOR COVER CAPS.



KIA PICANTO



ISUZU PICK UP

FREQUENT CHECKING OF WATER COOLANT AND WINDSHIELD WASHER LEVEL INCLUDING COVER CAPS



**ALWAYS CHECK TYRE CONDITIONS, REQUEST FOR REPLACEMENT WHEN
PUNCTURED OR DAMAGED**



PUNCTURED TIRE



DAMAGED TIRE



ENGINE START / STOP BUTTON (IGNITION SWITCH)



KNOWING YOUR DASHBOARD WARNING LIGHTS

ISUZU PICK UP'S



IGNITION SWITCH IS TURNED
ON


BATTERY WARNING INDICATOR

BATTERY CHARGE IS LOW, DO NOT CONTINUE
DRIVING AND HAVE A BATTERY SERVICE
IMMEDIATELY



DASHBOARD WARNING LIGHTS CONCERNING ENGINE

ENGINE TEMPERATURE WARNING
CHECK WATER COOLANT

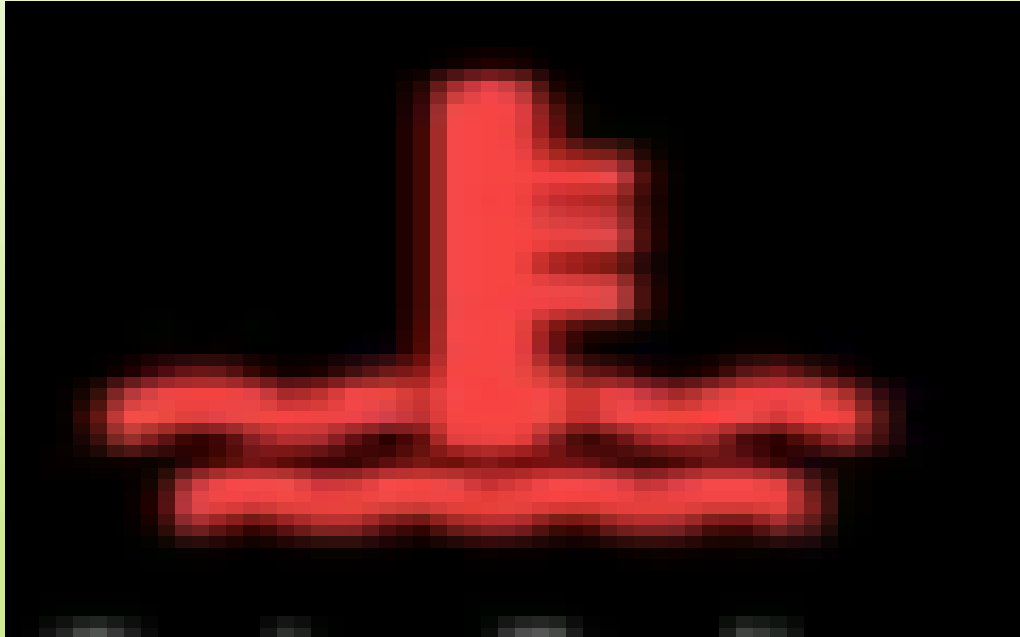

LOW OIL LEVEL, DO NOT DRIVE, IMMEDIATELY
ADD OIL TO THE PROPER LEVEL



DASHBOARD WARNING LIGHTS

ENGINE MALFUNCTION INDICATOR

DO NOT USE AND HAVE YOUR ENGINE CHECKED AND
SERVICED IMMEDIATELY



DASHBOARD WARNING LIGHTS

BRAKE SYSTEM

DO NOT DRIVE, PARKING BRAKE IS ON OR ACTIVE, OR BREAKING SYSTEM HAS SOME PROBLEM / BREAK FLUID IS LOW. MAKE SURE PARKING BRAKE IS FULLY RELEASED OR ADD BREAK FLUID LEVEL IF NECESSARY.



STEERING SYSTEM WARNING INDICATOR

DO NOT DRIVE, PROBLEM WITH THE STEERING SYSTEM, STEERING MAY BECOME DIFFICULT WHILE DRIVING




DASHBOARD WARNING LIGHTS

FUEL GAUGE



WARNING INDICATOR

FUEL IS LOW AND NEEDS REFUELING

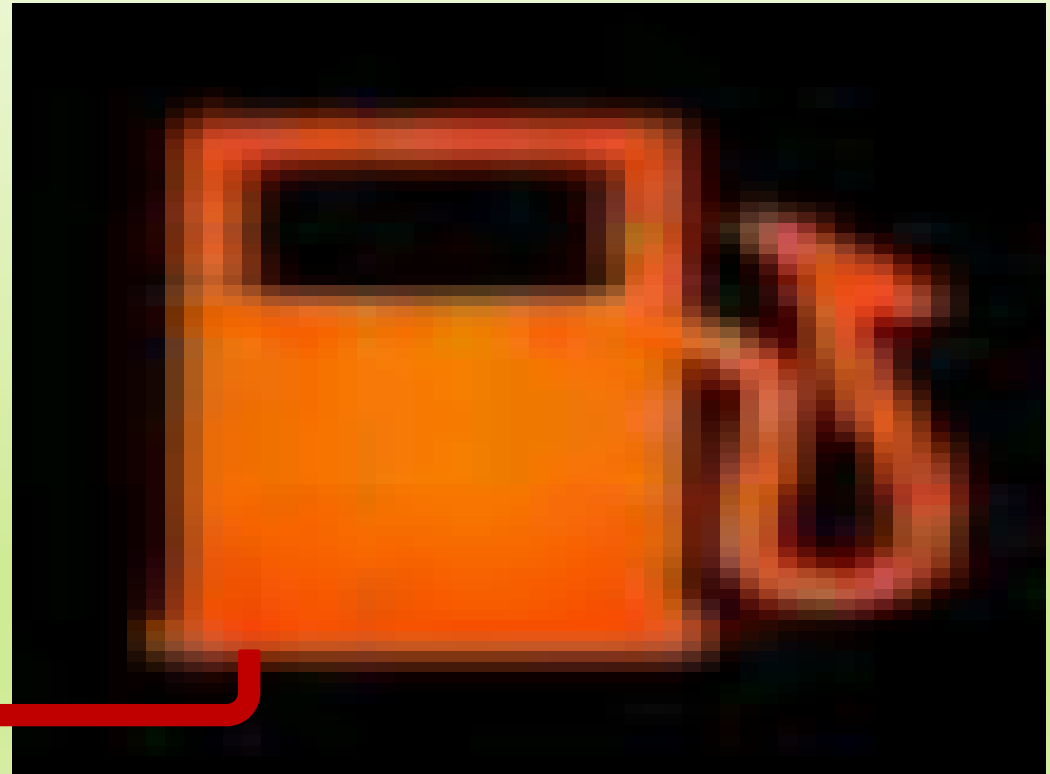

DASHBOARD WARNING LIGHTS

CONCERNING YOUR SAFETY

ONE OR MORE DOOR ARE OPEN
CHECK AND CLOSE DOORS



HOOD OR BONNET IS OPEN
CHECK AND CLOSE THE HOOD



DASHBOARD WARNING LIGHTS

CONCERNING YOUR SAFETY

SEAT BELT WARNING

ONE OR MORE THAN ONE PASSENGER ARE NOT WEARING SEAT BELT



AIRBAG WARNING

THERE IS A FAULT WITH ONE OR MORE OF THE AIRBAGS WITHIN THE VEHICLE. RECOMMEND TO CHECK THE SYSTEM AND BE SERVICED.



DASHBOARD WARNING LIGHTS CONCERNING YOU AND OTHER ROAD USER


TURN LEFT-RIGHT SIGNAL INDICATOR / HAZARD LIGHT

TURNING RIGHT



HAZARD PUSH BUTTON

TURNING LEFT

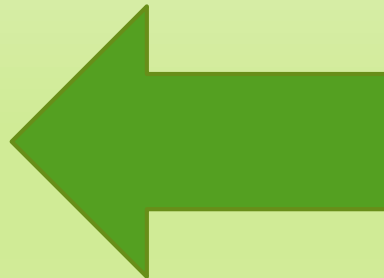


DASHBOARD WARNING LIGHTS CONCERNING YOU AND OTHER ROAD USER

HIGH BEAM INDICATOR



TAIL LIGHT INDICATOR

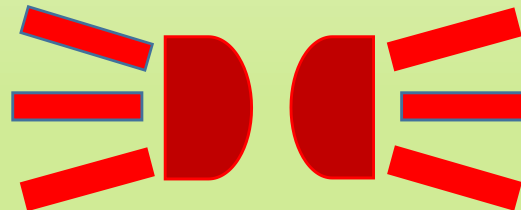

IMMOBILIZER AND ECO INDICATOR WARNING LIGHT FOR KIA PICANTO



Fuel consumption link to individual pedal act (Light or hard footer)

ADDITIONAL WARNING LIGHTS FOR ISUZU PICK UP'S

GLOW PLUG INDICATOR LIGHT

FOR DIESEL VEHICLES, THE ENGINE SHOULD NOT BE STARTED UNTIL THIS LIGHT GOES OUT



WATER SEPARATOR WARNING LIGHT

INDICATES THE PRESENCE OF WATER IN THE FUEL. DO NOT USE THE VEHICLE, NEEDS SERVICING.



HAVE A SAFE DRIVE

BUCKLE UP!!!